



## **Spatial Dual Trimble BD982 Field License Upgrade**

1. Connect to your Spatial Dual unit with Spatial Dual Manager.
2. Go into Configuration → GPIOs and set the Auxiliary Tx and Auxiliary Rx functions to "GNSS Receiver Passthrough".
3. Go into Configuration → Baud Rates and set the Auxiliary baud rate to 115,200.
4. Disconnect and close Spatial Dual Manager.
5. Unplug the USB to RS232 cable from the primary port and connect it to the auxiliary port.
6. Download and run our Trimble utility from the link below.  
<http://hq.advancednavigation.com.au/files/TrimbleUtility.jar>
7. Connect with the Trimble utility and ensure that the serial number appears in the top left of the window indicating a successful connection.
8. Copy and paste the license code provided into the "Update License" text box.
9. Watch the "Current License" section while clicking the send button. On successful application of a license upgrade the values in this section should change.
10. The license installation is now complete and permanent.